













 

 



 

 



 

 

 





 



 


Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Replacement
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 RED	 Red / Netflix / Search





Original	Replacement
 >>	 >> / Tune+
 GREEN	 Green / APP / Repeat
 I<<	 I<< / Preset-
 YELLOW	 Yellow / YouTube / Repeat
 BLUE	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 PLAY	 Play / Slow
 PAUSE	 Pause / Step / Freeze
 TEXT	 Text / Goto
 STOP	 Stop / Hold
 SUBTITLE	 Subtitle / EQ
 RADIO	 TV/Radio /
 OPT	 Setup / OPT /
 DMP	 Display / Media
 INDEX	 D.Menu / Top
 REC	 Rec / Rec Mode

Original	Replacement

