



Original	Replacement	Original	Replacement
	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	Eject		Eject / Surround
	4		4
	5		5
	6		6
	Play/Pause		Play / Slow
	7		7
	8		8
	9		9
	Stop		Stop / Hold
	0		0
	-/--	+	Shift + Guide / EPG / -/--
	Return		Back / Return

Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Vol-		Vol-
	Up		Up
	CH+		CH+ / Page+
	Vol+		Vol+
	Left		Left
	OK		OK
	Right		Right
	Sys Menu		D.Menu / Top
	CH-		CH- / Page-
	Down		Down
	Display		Display / Media
	Picture		Picture / Format
	Sound		Sound / Title
	Timer		Sleep / Timer
	Nicam/A2		Audio / Lang I/II
	Lan/Prog-	+	Shift + CH- / Page-





Original	Replacement
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
<</Subpage	<< / Preset-
FAV	Fav / Marker / PC
>> /Index	>>  / Preset+
EPG	Guide / EPG / -/--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Replacement
Blue/A-B/Subtitle	Blue / Prime Video / Random

