










 

 



 









 









 



 












 




 




 


 








 

 
 

 
 
 

 

 

 
 
 
 
 

 








 





Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red








 




 

 




 

 



 

 



 





Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 Sleep
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart






 



 

 





 



 

 

 



 



 



 



 
 
 

 














	Original	Replacement	Original	Replacement
	Input Sel	 AV		
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Prog+	 Ch +		
	Prog-	 Ch -		
	Standby/On TV	 Power		
	Mute Tv	 Mute		
	Tv Vol+	 Vol +		
	Tv Vol-	 Vol -		


 














	Original	Replacement		Original	Replacement
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Prog+
	7		7		Prog-
	8		8		Menu
	9		9		Return
	0		0		Exit
	Tv/DVD		TV/R		Title List/Disc Menu
	Open/Close		Eject		Play List/Title Menu
	DTV/Analog		Smart		Red
	Input Sel		AV		Green
	Copy		Options		Yellow
	Pause		Pause		Blue
					Red
					Green
					Yellow
					Blue
					Shift + Menu





Original		Replacement		Original		Replacement	
	Guide		Guide		USB		Shift + Media
	Info		Info		Timer		Shift + AV
	Subtitle		Subt		HDD		Shift + Smart
	Text		Text				
	Tv/Radio		D. Menu				
	FAV List		Pre Ch				
	Marker		Shift + Options				
	Rec		Rec				
	Audio		Dual				
	Rec Mode		Shift + Rec				
	Rec		Format				
	Repeat		Shift + Text				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

