

 

 

 





































Original	Replacement
 Power	 Power
 Guide	 Guide / EPG / -/--
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 [=◇]/STTL	 Subtitle / EQ
 [=+]/Aspect	 Picture / Format
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 APPS	 Shift + Green / APP /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK

Original	Replacement
 Home	 Shift + Menu /
 Option	 Setup / OPT /
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement	Original	Replacement
6	6		
7	7		
8	8		
9	9		
0	0		
?/Help	Smart / List		
Last View	Fav / Marker / PC		
<<	<< / Tune-		
Play	Play / Slow		
>>	>> / Tune+		
<<	<< / Preset-		
Pause	Pause / Step / Freeze		
>>	>> / Preset+		
Stop	Stop / Hold		
Rec	Rec / Rec Mode		

Original	Replacement	Original	Replacement

