 



 







 
 
 
 
 

 
 
 
 
 

 

 
 
 
 


 
 
 

 

 

 
 
 

 
 
 
 
 

 
 


 




 


 






 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Still		Format
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	i		Info
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Exit		Exit
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	TV		TV/R
	Media		Media
	Guide		Guide
	[+]		3D
	Timer		Shift + AV





Original	Replacement	Original	Replacement
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 STTL	 Subt		
 Sound	 Shift + Dual		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

