 







Original	Replacement
 On / Stand-By	 Power
 Clear / Dimmer	 Yellow
 Memory	 Green
 Disc Select 1	 Shift + 1
 Disc Select 2	 Shift + 2
 Disc Select 3	 Shift + 3
 Disc Select 4	 Shift + 4
 Disc Select 5	 Shift + 5
 CD	 Smart
 Tuner (Band)	 Media
 Video / AUX / USB	 Shift + Smart
 CD Random	 Red
 CD Pause	 TV/R
 USB Pause	 Shift + Pause
 CD Pause	 Pause
 CD Stop	 Format
 CD Stop	 Stop

Original	Replacement
 CD Play	 Sleep
 CD Play	 Play
 USB Stop	 Shift + Stop
 USB Play	 Shift + Play
 Tuning +	 Shift + Up
 Tuning +	 Up
 Tuning -	 Shift + Down
 Tuning -	 Down
 >>I / >> / Preset Up	 >>
 >>I / >> / Preset Up	 >>I
 >>I / >> / Preset Up	 Right
 I<< / << / Preset Down	 <<
 I<< / << / Preset Down	 I<<
 I<< / << / Preset Down	 Left
 Display	 Info
 Folder	 Ok
 Clock / Timer	 AV





	Original		Replacement	
	RDS ASPM		7	Shift + 7
	RDS PTY		8	Shift + 8
	RDS Display		9	Shift + 9
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	+10		GUIDE	Guide
	Equalizer Mode		DUAL	Dual
	X-Bass / Demo		SUBT	Subt
	Volume -		VOL -	Vol -

	Original		Replacement	
	Volume +		Vol +	

