

 
 

 
 

 





 
 



 
 

 
 


 



 










 








 


 


 
 




	Original	Replacement		Original	Replacement
	Power		Power		Enter
	Dimmer		Media		Ok
	Mode		Smart		1
	Info		Info		2
	Internet Radio		Red		3
	Music Server		Green		4
	Online/Music		Yellow		5
	iPod/USB		Blue		6
	I<<<		I<<<		7
	Play		Play		8
	Pause		Pause		9
	Stop		Stop		0
	>>>I		>>>I		+10
	Up		Up		Favorite Call
	Down		Down		Favorite Add
	Right		Right		Setup
	Left		Left		Search
					Clear
					Guide
					Back
					Pre Ch
					Options
					TV/R
					Exit



