 

 



 

 
 
 











 










 
 





 

 





 

 



 

 

 

 

 





 

 

 

 

 



 



 





Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 8	 8
 Power	 Power	 9	 9
 Phono	 Shift + 9	 0	 0
 Tuner	 Shift + 6	 Menu / Guide	 Menu / Home
 CD	 Shift + 3	 Up	 Up
 CDR / Tape	 Shift + 5	 OK	 OK
 TV	 Shift + 1	 Left	 Left
 VCR	 Shift + 4	 Right	 Right
 SAT	 Shift + 0	 Vol +	 Vol+
 DVD	 Shift + 2	 Down	 Down
 1	 1	 Vol -	 Vol-
 2	 2	 i / News TA	 Info / Angle
 3	 3	 Channel/Track -	 I<< / Preset-
 4	 4	 Channel/Track +	 >>I / Preset+
 5	 5	 Loudness	 Audio / Lang I/II
 6	 6	 SubW On/Off	 Subtitle / EQ
 7	 7	 FR. D.	 Zoom / Size





Original	Replacement	Original	Replacement
 Night	 Sleep / Timer		
 Virtual Mode	 Sound / Title		
 Surround On/Off	 Eject / Surround		
 Sub Woofer +	 CH+ / Page+		
 Rear Channel +	 >> / Tune+		
 Surround Mode	 Picture / Format		
 Sub Woofer -	 CH- / Page-		
 Rear Channel -	 << / Tune-		
 Test Tone	 Text / Goto		

Original	Replacement

