







Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol +		Vol+
	Info		Info / Angle		ADD / DEL		Shift + Back / Return
	0		0		PR +		CH+ / Page+
	Recall		Back / Return		Vol -		Vol-
	PMode		Picture / Format		Cancel		Shift + Exit / Cancel / Clear
	I / II		Audio / Lang I/II		PR -		CH- / Page-
	EPG		Guide / EPG / -/--		Red		Red / Netflix / Search





Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Eject	 Eject / Surround
 I<<< / Text	 Shift + I<<< / Preset-
 I<<< / Text	 I<<< / Preset-
 <<<	 <<< / Tune-
 Size	 Zoom / Size
 S. Title M.	 Sound / Title
 >>>I / Hold	 >>>I / Preset+
 >>>I / Hold	 Shift + >>>I / Preset+
 >>> / Reveal	 >>> / Tune+
 Subpage / Rec	 Shift + Rec / Rec Mode

Original	Replacement
 Subpage / Rec	 Rec / Rec Mode
 Index / List	 Smart / List

