



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV / R	TV/Radio /
Home	D.Menu / Top
FAV	Fav / Marker / PC
Back	Back / Return
Audio	Audio / Lang I/II

Original	Replacement
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Vol +	Vol+
Vol -	Vol-
P +	Shift + CH+ /
List	Smart / List
P -	Shift + CH- /
CH +	CH+ / Page+
USB	Shift + 8
Text	Text / Goto





Original	Replacement
 CH -	 CH- / Page-
 SUB	 Subtitle / EQ
 Aspect	 Picture / Format
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

