





 




 




Original	Replacement
	Power
	Display / Media
	Shift + 1
	TV/Radio /
	AV / Input / RDS
	Picture / Format
	Menu / Home
	Audio / Lang I/II
	Shift + Rec Mode
	Info / Angle
	Exit / Cancel / Clear
	D.Menu / Top
	Smart / List
	Up
	Guide / EPG / -/--
	Left
	OK

Original	Replacement
	Right
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Subtitle / EQ
	Zoom / Size
	Shift + Stop /
	1
	2
	3
	4
	5



