
 



























 

 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 EPG	 Guide
 Menu	 Menu
 Exit	 Exit
 OK/List	 Ok

Original	Replacement
 ←PR	 Back
 FAV	 Pre Ch
 Up	 Up
 PR+	 Ch +
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Red/Find	 Red
 Green/Zoom	 Green
 Yellow	 Yellow
 Text	 Text
 Blue	 Blue
 Audio L/R	 Dual
 Info	 Info





	Original	Replacement	Original	Replacement
	Tv/AV	TIMER AV		AV
	Sleep	PROG SLEEP		Sleep
	[+]	SETTINGS OPT		Options
	Record	REC MODE		Rec
	Play	PLAY MODE		Play
	Stop			Stop
	Shift	APP MEDIA		Media
	<< Fast			<<
	Fast >>			>>
	< Slow			I<<
	Slow >			>>I
	Pause			Pause
	↑/Page+	ECO 3D		3D
	↓/Page-	PICTURE FORMAT		Format

