














 


 























 



















Original	Replacement	Original	Replacement
 Power	 Power	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV Mode	 Shift + 1
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 VFD	 Blue / Prime Video / Random	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 L/R	 Red / Netflix / Search	 USB/Card	 Shift + 8
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home
 9	 9	 Left	 Left
 P/N	 Yellow / YouTube / Repeat	 Enter	 OK
 Repeat	 Green / APP / Repeat	 Right	 Right
 0/10	 0	 Clock	 Sleep / Timer





Original	Replacement	Original	Replacement
	Down		Down
	Setup		Setup / OPT /
	Echo-		CH- / Page-
	Echo+		CH+ / Page+
	Mic Vol-		Shift + Vol-
	Mic Vol+		Shift + Vol+
	Mic On/Off		Smart / List
	Treb+		Shift + Up
	Bass+		Shift + CH+ /
	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-		Shift + Down
	Bass-		Shift + CH- /
	Vol-		Vol-

Original	Replacement	Original	Replacement

