

 
 















 






 








 


 


 










 
 


 

 
 


 






Original		Replacement		Original		Replacement	
	Standby/On		Power		Down		Down
	Rec		Rec		Right		Right
	1		1		Left		Left
	2		2		>>		>>
	3		3		<<		<<
	4		4		Menu		Menu
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		> </Still		Pause
	8		8		P+		Ch +
	9		9		P-		Ch -
	0		0		Mute		Mute
	Status/Exit		Exit		> /Index		Text
	Clear		Shift + Exit		Slow		AV
	Play		Play		System		Media
	Stop		Stop		Turbo Timer		Options
	Up		Up		SV/V+		Format



