

 



 
 

 
 
 
 

 
 
 

 

 

 
 

 
 


 
 
 



 


 
 



 



 


 


 










 







| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  1 |  1 |
|  Pause/Slow |  Pause |  2 |  2 |
|  Rec |  Rec |  3 |  3 |
|  Index >>I |  >>I |  4 |  4 |
|  I<< Index |  I<< |  5 |  5 |
|  Search |  TV/R |  6 |  6 |
|  Up |  Up |  7 |  7 |
|  Play |  Play |  8 |  8 |
|  Down |  Down |  9 |  9 |
|  Stop |  Stop |  0 |  0 |
|  Right |  Right |  -/-- |  -/-- |
|  >> |  >> |  AV/Input Select |  Shift + AV |
|  << |  << |  Tracking/V-Look+ |  Ch + |
|  Left |  Left |  Tracking/V-Look- |  Ch - |
|  Menu |  Menu |  Vol+ |  Vol + |
|  Exit |  Exit |  Vol- |  Vol - |
|  OK |  Ok |  Show View |  Smart |






 

 
 
 
 

 
 
 

 



 

 
 

 








 

 
 
 





| Original | Replacement | Original | Replacement |
|---|--|---|--|
|  Prog/Check |  Sleep |  Blue/Off- |  AV |
|  Cancel |  Back | | |
|  VPS/PDC |  Blue | | |
|  SP/LP |  Format | | |
|  Timer Rec |  3D | | |
|  AV Link |  Media | | |
|  Audio Out |  Red | | |
|  OSD/Display |  Info | | |
|  Reset |  Pre Ch | | |
|  Direct Tv Rec |  Shift + Rec | | |
|  Up |  List | | |
|  Red/Down |  D. Menu | | |
|  Date+ |  Dual | | |
|  Green/Date- |  Text | | |
|  On+ |  Subt | | |
|  Yellow/On- |  Eject | | |
|  Off+ |  Options | | |





| Original | Replacement | Original | Replacement |
|---|---|--|--|
|  Power |  Power |  Green |  Green |
|  1 |  1 |  Yellow |  Yellow |
|  2 |  2 |  Blue |  Blue |
|  3 |  3 | | |
|  4 |  4 | | |
|  5 |  5 | | |
|  6 |  6 | | |
|  7 |  7 | | |
|  8 |  8 | | |
|  9 |  9 | | |
|  0 |  0 | | |
|  -/-- |  GUIDE | | |
|  AV |  AV | | |
|  Tv/Text |  Text | | |
|  CH+ |  Ch + | | |
|  CH- |  Ch - | | |
|  Red |  Red | | |

