



Original	Replacement
Power	Power
AV Mode	Shift + AV
Radio	TV/R
Surround	List
OPC	Media
DTV	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Pre Ch

Original	Replacement
Source	AV
P+	Ch +
P-	Ch -
Vol+	Vol +
Vol-	Vol -
Mute	Mute
[<>]	Format
▼/O/I/II/I+II	Dual
[i+]	Info
Sleep	Sleep
EPG	Guide
ESG	Options
DTV Menu	D. Menu
[≡]	Text
Menu	Menu
End	Exit
Return	Back





Original	Replacement	Original	Replacement
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡?]		3D
	[≡+]		Eject
	[...]		Subt
	[≡o]	 + 	Shift + 3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

