

 
 
 



 

 


 







 


 
 

 
 




 
 
 
 
 




 


 



 
 



 


 
 
 



 






 
 


 

 
 




 
 

 





 
 

 






 



 







Original	Replacement	Original	Replacement
 Power	 Power	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 <<	 <<
 Eject/Open-Close	 Eject	 Stop	 Stop
 VCR	 Smart	 Play	 Play
 DVD	 Media	 Pause/Step	 Pause
 3	 3	 Disc Menu/List	 Menu
 4	 4	 Home	 +  Shift + Smart
 5	 5	 Display	 Info
 6	 6	 Return	 Back
 7	 7	 Enter	 Ok
 8	 8	 Up	 Up
 9	 9	 PR/CH/TRK+	 Ch +
 0	 0	 PR/CH/TRK-	 Ch -
 Clear	 Exit	 Down	 Down
 AV/Input	 AV	 Right	 Right
 >>	 >>	 Left	 Left





	Original	Replacement
	O))/Audio	 Dual
	[...]/Subtitle	 Subt
	Zoom	 Shift + Eject
	I.Skip	 3D
	Rec	 Rec
	TV/VCR	 TV/R
	CHP.ADD	 Text
	Title	 Options
	Rec Mode	 Shift + Rec
	Dubbing	 Mute
	Play Mode	 Shift + Play
	Marker	 Pre Ch
	Search	 Shift + TV/R
	Thumbnail	 List
	Power Tv	 Shift + Power
	AV/Input Tv	 Shift + AV
	Vol+ Tv	 Vol +

	Original	Replacement
	Vol- Tv	 Vol -
	PR/CH+ Tv	 Shift + Ch +
	PR/CH- Tv	 Shift + Ch -

