











 



 

 



 



 

 

 





 



 

 

 

 









 

 



 

 


 




Original	Replacement	Original	Replacement
	Power		Power
	Home		Menu / Home
	[I]		Info / Angle
	Up		Up
	I <		I << / Preset-
	Left		Left
	OK		OK
	Right		Right
	> I		>> I / Preset+
	Down		Down
	Back		Back / Return
	[*]		AV / Input / RDS
	III		Setup / OPT /
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Vol+		Vol+
	Pause		Pause / Step / Freeze
	Vol-		Vol-
	Yellow/Dock for iPod		Yellow / YouTube / Repeat
	Blue/Audio Source		Blue / Prime Video / Random
	Red/Disc		Red / Netflix / Search
	Green/Radio		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ



