



Original	Replacement
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Dimmer	Shift + Mute / Dimmer
Input Selector Multi CH	8
Return	Back / Return
Setup	Setup / OPT /
Enter	OK
Input Selector	2
Input Selector	5
Sleep	Sleep / Timer
Input Selector Tuner	6
SP A/B	Audio / Lang I/II
Muting	Mute / Dimmer
Up	Up
Down	Down

Original	Replacement
Right	Right
Input Selector CD	3
Left	Left
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
Play Rev.	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Display	Display / Media
Listening Mode Stereo	Sound / Title
Listening Mode Surround	Eject / Surround
Listening Mode <	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Text / Goto
Level-	CH- / Page-





Original	Replacement
Vol+	Vol+
CH Sel	Smart / List
Level+	CH+ / Page+
L.Night	TV/Radio /
Cine FLTR	D.Menu / Top
Vol-	Vol-
Input Tv	Shift + AV / Input / RDS
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
CH/Disc/Album	Shift + CH+ /
CH/Disc/Album-	Shift + CH- /
1 Tv	Shift + 1
2 Tv	Shift + 2
Power Tv/Standby	Shift + Power
3 Tv	Shift + 3
4 Tv	Shift + 4
6 Tv	Shift + 6

Original	Replacement
5 Tv	Shift + 5
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Enter Tv	Shift + OK
Right Tv	Shift + Right
Previous Menu Tv	Shift + Fav / Marker / PC
Left Tv	Shift + Left
Setup Tv	Shift + Setup / OPT / Tools
Up Tv	Shift + Up
Down Tv	Shift + Down





Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
VCR	Shift + 4
+10/10/-/-	Guide / EPG / -/-
0/11	0
CLR	Exit / Cancel / Clear
Top Menu	D.Menu / Top
Up	Up
Previous Menu/Muting	Home / Menu

Original	Replacement
Previous Menu/Muting	Mute / Dimmer
Left/Playlist/Cat-	Left
Enter	OK
Right/Playlist/Cat	Right
Return	Back / Return
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
I>>I	I>>I / Preset+
Stereo	Sound / Title
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-

 







 



 

 





















Original	Replacement	Original	Replacement
Listening Mode >	+  Shift + >>1 / Preset+		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Random	Blue / Prime Video / Random		
Repeat	Green / APP / Repeat		
Display	Display / Media		
Play Mode VCR	Picture / Format		
DVD	+  Shift + 2		
HDD	+  Shift + 7		

 


 





 



























 

 





Original	Replacement	Original	Replacement
 On / Standby	 Power	 Pause	 Pause / Step / Freeze
 1	 1	 Play	 Play / Slow
 2	 2	 Stop	 Stop / Hold
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 I<<	 I<< / Preset-
 6	 6	 >>I	 >>I / Preset+
 7	 7	 Stereo	 Audio / Lang I/II
 8	 8	 Surround	 Eject / Surround
 9	 9	 < Listening Mode	 Shift + I<< / Preset-
 +10/10/-/-	 Guide / EPG / -/-	 Listening Mode >	 Shift + >>I / Preset+
 0/11	 0	 Random	 Blue / Prime Video / Random
 12	 Fav / Marker / PC	 Repeat	 Green / APP / Repeat
 Disc+	 CH+ / Page+	 Display	 Display / Media
 Vol+	 Vol+		
 Disc-	 CH- / Page-		
 Vol-	 Vol-		





	Original	Replacement		Original	Replacement
	Power		Power		<< / Tune-
	1		1		Stereo
	2		2		Surround
	3		3		< Listening Mode
	4		4		Listening Mode >
	5		5		Play Mode
	6		6		L.Night
	7		7		
	8		8		
	9		9		
	+10/10/-/-		Guide / EPG / -/-		
	0/11		0		
	CH+		CH+ / Page+		
	CH-		CH- / Page-		
	Pause		Pause / Step / Freeze		
	Play		Play / Slow		
	Stop		Stop / Hold		

