


 













 

 







 









 

 

 

 







 


 








 


 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Slow/Search >>	 >>
 1	 1	 << Slow/Search	 <<
 2	 2	 >> /Skip Up	 >>
 3	 3	 <</Skip Down	 <<
 4	 4	 Play DVD/CD	 Play
 5	 5	 Play USB	 Red
 6	 6	 FM/AM/Ext-In	 TV/R
 7	 7	 Top Menu/Direct Navigator	 Shift + Menu
 8	 8	 Start	 Blue
 9	 9	 Menu/Play List	 Menu
 0	 0	 Return	 Back
 -/+/10 Guide	 GUIDE	 Up	 Up
 >/Option	 OPT	 Down	 Down
 Vol+	 Vol +	 Right	 Right
 Vol-	 Vol -	 Left	 Left
 Stop	 Stop	 OK	 Ok
 Pause	 Pause	 Functions	 Pre Ch





Original		Replacement		Original		Replacement	
	Setup		D. Menu				
	Sound		Dual				
	Cancel		Exit				
	Play Mode/Repeat		Text				
	Sleep/Timer Play		Sleep				
	Clock/Timer		AV				
	Muting		Mute				
	FL Display		Info				
	One Touch Play		Smart				
	Power Tv	 + 	Shift + Power				
	TV/AV Tv	 + 	Shift + AV				
	Vol+ Tv	 + 	Shift + Vol +				
	Vol- Tv	 + 	Shift + Vol -				

