















































































 





Original	Replacement	Original	Replacement
AVR Power On	 Power	OK	 OK
Mute	 Mute / Dimmer	Right	 Right
Play	 Play / Slow	Back/Exit	 Exit / Cancel / Clear
Pause	 Pause / Step / Freeze	Down	 Down
Stop	 Stop / Hold	Last	 Back / Return
<<	 << / Tune-	Vol+	 Vol+
>>	 >> / Tune+	AVR	 Smart / List
I<<	 I<< / Preset-	CH/Page Up	 CH+ / Page+
>>I	 >>I / Preset+	Vol-	 Vol-
Audio Effects	 Audio / Lang I/II	CH/Page Down	 CH- / Page-
Surround Modes	 Eject / Surround	1	 1
Video Modes	 Picture / Format	2	 2
Sleep	 Sleep / Timer	3	 3
Menu	 Menu / Home	4	 4
Up	 Up	5	 5
Info	 Info / Angle	6	 6
Left	 Left	7	 7

Original	Replacement	Original	Replacement
AVR Power On	 Power	OK	 OK
Mute	 Mute / Dimmer	Right	 Right
Play	 Play / Slow	Back/Exit	 Exit / Cancel / Clear
Pause	 Pause / Step / Freeze	Down	 Down
Stop	 Stop / Hold	Last	 Back / Return
<<	 << / Tune-	Vol+	 Vol+
>>	 >> / Tune+	AVR	 Smart / List
I<<	 I<< / Preset-	CH/Page Up	 CH+ / Page+
>>I	 >>I / Preset+	Vol-	 Vol-
Audio Effects	 Audio / Lang I/II	CH/Page Down	 CH- / Page-
Surround Modes	 Eject / Surround	1	 1
Video Modes	 Picture / Format	2	 2
Sleep	 Sleep / Timer	3	 3
Menu	 Menu / Home	4	 4
Up	 Up	5	 5
Info	 Info / Angle	6	 6
Left	 Left	7	 7





























 




 
Original	Replacement	Original	Replacement
1	 1		
DVR	 Display / Media		
DVR Power On	 Power		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Menu	 Menu / Home		
Up	 Up		
Down	 Down		
Right	 Right		
Left	 Left		

Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer		
Vol+	 Vol+		
Vol-	 Vol-		
CH/Page Up	 CH+ / Page+		
CH/Page Down	 CH- / Page-		





Original	Replacement	Original	Replacement
Bluray Power	 Power	Down	 Down
Mute	 Mute / Dimmer	Last	 Back / Return
Play	 Play / Slow	Vol+	 Vol+
Pause	 Pause / Step / Freeze	Vol-	 Vol-
Stop	 Stop / Hold	Blu-ray	 Display / Media
Rec	 Rec / Rec Mode	1	 1
<<	 << / Tune-	2	 2
>>	 >> / Tune+	3	 3
I<<	 I<< / Preset-	4	 4
>>I	 >>I / Preset+	5	 5
Disc Menu	 D.Menu / Top	6	 6
Menu	 Menu / Home	7	 7
Up	 Up	8	 8
Left	 Left	9	 9
OK	 OK	0	 0
Right	 Right	Red	 Red / Netflix / Search
Back/Exit	 Exit / Cancel / Clear	Green	 Green / APP / Repeat

Original	Replacement	Original	Replacement
Down	 Down	1	 1
Last	 Back / Return	2	 2
Vol+	 Vol+	3	 3
Vol-	 Vol-	4	 4
Blu-ray	 Display / Media	5	 5
1	 1	6	 6
2	 2	7	 7
3	 3	8	 8
4	 4	9	 9
5	 5	0	 0
6	 6	Red	 Red / Netflix / Search
7	 7	Green	 Green / APP / Repeat
8	 8		
9	 9		
0	 0		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		





Original	Replacement	Original	Replacement
AVR Power On	Power	Right	Right
AVR Power Off	Shift + Power	Left	Left
1	1	OK	OK
2	2	Red	Red / Netflix / Search
3	3	Green	Green / APP / Repeat
4	4	Yellow	Yellow / YouTube / Repeat
5	5	Blue	Blue / Prime Video / Random
6	6	Vol+	Vol+
7	7	Vol-	Vol-
8	8	Mute	Mute / Dimmer
9	9	CH/Page Up	CH+ / Page+
0	0	CH/Page Down	CH- / Page-
Menu	Menu / Home	Pause	Pause / Step / Freeze
Back/Exit	Exit / Cancel / Clear	I<< / Preset-	I<< / Preset-
Last	Back / Return	>>I / Preset+	>>I / Preset+
Up	Up	Play	Play / Slow
Down	Down	<< / Tune-	<< / Tune-



