

 
 
 
 
 

 

 
 

 

 

 

 

 









 







 





 

 






 

 
 

 




 







Original	Replacement	Original	Replacement
	Power		Power
	Red/Disc		Red
	Green/Dock for		Green
	Yellow/Help		Yellow
	Blue/Source		Blue
	Pop Up Menu/Disc Menu		Menu
	Home		Smart
	Sound Settings		Dual
	Back		Back
	Options		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Stop/Open/Clos		Stop
	Play		Play
	Pause		Pause
	I<		I<<
	<<		<<
	>>		>>
	>I		>>I
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





	Original	Replacement	Original	Replacement
	0	0		
	Subtitle	Subt		
	Top Menu	Shift + Menu		

