
 
 







 
 
 
 
 

 


 


 
 
 

 
 
 


 








Original	Replacement
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Original	Replacement
Down	Down
Return	Back
System Menu	Menu
[+] Display	Info
I << / Preset-	I <<
Replay	Shift + Left
Advance	Shift + Right
>> I / Preset+	>> I
<< / < I / Tuning-	<<
Play	Play
>> / I > / Tuning+	>>
Pause	Pause
Stop	Stop
TV	TV/R
Muting	Mute
Volume+	Vol +
Volume-	Vol -

Original	Replacement
Sound Mode+	Ch +
Sound Mode-	Ch -





Original		Replacement	
	Power		Power
	[i+]		Info
	Analog		Media
	Digital		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	-/--	+	Shift + Guide
	Guide		Guide

Original		Replacement	
	Source		AV
	Tools / Options		Options
	Home / Menu		Menu
	Muting		Mute
	Volume+		Vol +
	Volume-		Vol -
	Prog+		Ch +
	Prog-		Ch -

