



Original	Replacement
 Standby	 Power
 Equalizzatore	 Shift + Sound / Title
 Surround	 Shift + Eject / Surround
 Eject	 Eject / Surround
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Sottotitoli	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Ricerca	 Red / Netflix / Search

Original	Replacement
 Canc	 Exit / Cancel / Clear
 0/10	 0
 10+	 Guide / EPG / -/-
 Titolo	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Programm	 TV/Radio /
 Down	 Down
 Display	 Display / Media
 PAL/NTSC	 D.Menu / Top
 Setup	 Setup / OPT /
 Digest	 Shift + D.Menu / Top Menu
 Vol+	 Vol+
 Mute	 Mute / Dimmer





	Original	Replacement		Original	Replacement
	Mark	 Fav / Marker / PC			
	Zoom	 Zoom / Size			
	Vol-	 Vol-			
	A-B	 Yellow / YouTube / Repeat			
	Ripeti	 Back / Return			
	Slow	 Shift + Play /			
	<</F.RWD	 << / Tune-			
	F.FWD/>>	 >> / Tune+			
	I<< / Skip-	 I<< / Preset-			
	>>I / Skip+	 >>I / Preset+			
	Stop	 Stop / Hold			
	Pause/Step	 Pause / Step / Freeze			
	Play	 Play / Slow			

	Original	Replacement		Original	Replacement

