

 





 





 







 



 

 



 



 



 







 


































 








 

 





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Input DVD CD		Shift + 2
	Input Radio /		Shift + 6
	Input VCR		Shift + 4
	Input SAT		Shift + 0
	Input AV AUX		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Listen Mode		TV/Radio /
	7		7
	8		8
	9		9
	Sound		Sound / Title
	10+		Guide / EPG / -/-
	Clear		Shift + Exit / Cancel / Clear
	0		0
	100+		Fav / Marker / PC
	Input Mode		AV / Input / RDS
	Front		Shift + Right
	Center		Shift + OK
	Rear		Shift + Left
	Sub-Woofer		Eject / Surround
	Repeat		Green / APP / Repeat
	Trim+		CH+ / Page+
	Volume+		Vol+
	Repeat A-B		Yellow / YouTube / Repeat
	Trim-		CH- / Page-
	Volume-		Vol-
	Top Menu		D.Menu / Top





Original	Replacement
 Up	 Up
 Menu	 Menu / Home
 PTY	 Text / Goto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 On Screen	 Display / Media
 Subtitle	 Subtitle / EQ
 Auto / Mono	 Audio / Lang I/II
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 Tune-	 Shift + << /
 >>	 >> / Tune+

Original	Replacement
 Tune+	 Shift + >> /
 I<<	 I<< / Preset-
 Preset-	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 Preset+	 Shift + >>I / Preset+
 Slow	 Shift + Play /
 Step	 Shift + Pause / Step /
 Bass Boost	 Zoom / Size
 Cine EQ.	 Picture / Format

