



Original	Replacement
	Power
	+  Shift + Mute / Dimmer
	Sleep / Timer
	Guide / EPG / -/--
	Fav / Marker / PC
	7
	8
	3
	1
	2
	4
	6
	5
	9
	TV/Radio /
	+  Shift + << /
	CH- / Page-

Original	Replacement
	CH+ / Page+
	+  Shift + >> /
	Smart / List
	I<< / Preset-
	>>I / Preset+
	Exit / Cancel / Clear
	Sound / Title
	Display / Media
	Up
	Left
	OK
	Right
	Down
	Menu / Home
	Back / Return
	Setup / OPT /
	Vol+





Original	Replacement
Option	D.Menu / Top
Now Playing	Info / Angle
Vol-	Vol-
Mute	Mute / Dimmer
Repeat	Green / APP / Repeat
Play	Play / Slow
Pause	Pause / Step / Freeze
Shuffle	Blue / Prime Video / Random
I<</<<	<< / Tune-
Stop	Stop / Hold
>>/>>I	>> / Tune+

Original	Replacement

