

 
 

 



 

 

 

 



Original	Replacement
Power	Power
Sleep	Sleep / Timer
Time Play	Subtitle / EQ
Clock/Timer	Shift + Sleep / Timer
Program	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--
DEL	Fav / Marker / PC

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
iPod	Red / Netflix / Search
CD	Shift + 3
Radio/Ext In	Shift + TV/Radio / Program
I<<	I<< / Preset-
Play/Pause	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Sound	Sound / Title
D.Bass	AV / Input / RDS
Preset EQ	Text / Goto
Display/Dimmer	Display / Media
Auto Off	Exit / Cancel / Clear





Original	Replacement
 iPod Menu	 Menu / Home
 Play Menu	 Info / Angle
 Radio Menu	 Smart / List
 Up	 Up
 Down/Album	 Down
 Left	 Left
 Right	 Right
 OK	 OK

Original	Replacement

