



	Original	Replacement
	Eject	Eject / Surround
	Power Tv	+  Shift + Power
	Power	Power
	1	1
	2	2
	3	3
	Vol+	Vol+
	4	4
	5	5
	6	6
	Vol-	Vol-
	7	7
	8	8
	9	9
	Tv/Video	TV/Radio /
	Clear	Exit / Cancel / Clear
	0	0

	Original	Replacement
	Enter	AV / Input / RDS
	Picture Mode	Picture / Format
	Audio	Audio / Lang I/II
	Subtitle	Subtitle / EQ
	Angle	Info / Angle
	Sur	+  Shift + Eject / Surround
	I<</Prev	I<< / Preset-
	>>I/Next	>>I / Preset+
	Repeat	Green / APP / Repeat
	Time/Text	Text / Goto
	<< Scan/Slow	<< / Tune-
	Scan/Slow >>	>> / Tune+
	Search Mode	Red / Netflix / Search
	Replay	Zoom / Size
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold





	Original	Replacement	Original	Replacement
	Up			
	Left			
	Enter			
	Right			
	Down			
	Display			
	Return			
	Top Menu			
	Menu			

