



Original	Replacement	Original	Replacement
	Power		Start
	Mute		Menu
	Play		Up
	Pause		Left
	Stop		OK
	<<		Right
	>>		Exit
	I<<		Down
	>>I		Return
	Sound/CH		Vol+
	W.SRD		Vol+ Tv
	Ext-In		Vol-
	Surround/Sleep		FL.Display
	Radio		Vol- Tv
	Top Menu		1
	Functions		2
	PlayMode/Repe		3
	Power		AV / Input / RDS
	Mute / Dimmer		Menu / Home
	Play / Slow		Up
	Pause / Step / Freeze		Left
	Stop / Hold		OK
	<< / Tune-		Right
	>> / Tune+		Exit / Cancel / Clear
	I<< / Preset-		Down
	>>I / Preset+		Back / Return
	Audio / Lang I/II		Vol+
	Picture / Format		CH+ / Page+
	Zoom / Size		Vol-
	Sleep / Timer		Display / Media
	TV/Radio /		CH- / Page-
	D.Menu / Top		1
	Setup / OPT /		2
	Text / Goto		3



