










 
 



 



 
 

 

 

 

 



 



 



 



 



 












 

 
 






Original		Replacement		Original		Replacement	
	Standby		Power		7		7
	Mute		Mute		8		8
	Aspect		Format		9		9
	P.Mode		Shift + Format		0		0
	S.Mode		Shift + Dual		-/--		Shift + Guide
	Nicam/Audio		Dual		Recall		Back
	Sleep		Sleep		Source		AV
	FAV List		Pre Ch		Menu		Menu
	EPG		Guide		Up		Up
	Rec		Rec		Left		Left
	PVR.Menu		D. Menu		Enter		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Exit		Exit
	6		6		Display		Info





Original	Replacement
CH+	Ch +
CH-	Ch -
Red	Red
Yellow	Yellow
Blue	Blue
Green	Green
TXT	Text
Index	Smart
Subpage	Subt
Hold	Shift + Left
Mix	Shift + Text
Reveal	List
Size	Eject
Cancel	Shift + Exit
Play / Pause	Play
Play / Pause	Pause
Stop	Stop

Original	Replacement
Tv/Radio	TV/R
Media	Media
>>I	>>I
I<<	I<<
<<	<<
>>	>>

