



 













 









 









Original	Replacement
 Title/Character	 Sound / Title
 Time	 Shift + Sleep / Timer
 System Power	 Power
 Random/RDS	 Shift + Smart / List
 Edit	 Setup / OPT /
 Enter/Memory	 OK
 <</Tuning	 << / Tune-
 >>/Tuning Up	 >> / Tune+
 Sleep	 Sleep / Timer
 Repeat/PTY	 Green / APP / Repeat
 Tuner	 Shift + 6
 Tone/SDB	 Shift + Sound / Title
 Function	 Smart / List
 I<</Preset	 I<< / Preset-
 >>I/Preset	 >>I / Preset+
 Prog/Direct/CT	 TV/Radio /
 Stop/Band	 Stop / Hold

Original	Replacement
 Vol+	 Vol+
 Play/Pause	 Shift + Play /
 Play/Pause MD	 Pause / Step / Freeze
 Disc Skip/EON	 Back / Return
 Play/Pause CD	 Play / Slow
 Vol-	 Vol-
 Call/Panel	 Shift + Display / Media
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





	Original	Replacement	Original	Replacement
	10	Guide / EPG / -/--		
	+10	0		
	Clear	Exit / Cancel / Clear		
	< Tape	+  Shift + << /		
	Tape >	+  Shift + >> /		

