
 




	Original	Replacement		Original	Replacement
	 Power	 Power		 Auto	 Auto
	 Page Up	 Vol + / Page +			
	 Page Down	 Vol - / Page -			
	 Computer 1/2 / 7	 Video Comp / Video			
	 S-Video/Video / 8	 Shift + Video Comp / Video			
	 Color Mode / 9	 Mode			
	 Menu / 4	 Menu			
	 AV Mute / 5	 Blank / Mute			
	 Pause/Freeze / 6	 Freeze / Timer			
	 E.Zoom+ / 3	 + / Play			
	 E.Zoom- / 1	 - / Stop			
	 Up / 2	 Up			
	 Down	 Down			
	 Right	 Right			
	 Left / 0	 Left			
	 Enter	 Enter			
	 ESC	 Eco / Aspect			

	Original	Replacement
	 Auto	 Auto

