



Original	Replacement
Function	Smart / List
Power	Power
Open/Close	Eject / Surround
Sleep	Sleep / Timer
Title	Sound / Title
Display	Display / Media
Menu	Menu / Home
Setup	Setup / OPT /
Up / Preset Up	Shift + >> / Preset+
Up / Preset Up	Up
Right/Tun+	Right
Right/Tun+	Shift + >> /
Left/Tun-	Shift + << /
Left/Tun-	Left
Enter	OK
Down / Preset	Shift + I<< / Preset-
Down / Preset	Down

Original	Replacement
Return	Back / Return
Rec	Rec / Rec Mode
Stop	Stop / Hold
Play/MO/ST	Play / Slow
Pause/Step	Pause / Step / Freeze
I<< Skip	I<< / Preset-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Skip >>I	>>I / Preset+
Random/Repeat	Green / APP / Repeat
Random/Repeat	Blue / Prime Video / Random
Vol+	Vol+
EQ ♪	Shift + Subtitle / EQ
EQ ♪	Audio / Lang I/II
Mute	Mute / Dimmer
Vol-	Vol-
Clear	Exit / Cancel / Clear



Down



Original	Replacement
1	1
2	2
3	3
[...] / Subtitle	Subtitle / EQ
4	4
5	5
6	6
Prog/Memo	TV/Radio /
7	7
8	8
9	9
0	0
Power Tv	Shift + Power
PR/CH+ Tv	Shift + CH+ /
Vol+ Tv	Shift + Vol+ /
RDS	AV / Input / RDS
Input Tv	Shift + AV / Input / RDS

Original	Replacement
PR/CH- Tv	Shift + CH- /
Vol- Tv	Shift + Vol-
PTY	Text / Goto

