



 






 






 










 





 

 

 










 
























 

















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Function	 Smart / List
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Return	 Back / Return
 EQ	 Shift + Subtitle / EQ
 VSM	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Echo Vol Down	 CH- / Page-
 Echo Vol Up	 CH+ / Page+
 Mic Vol Down	 Shift + CH- /
 Mic Vol Up	 Shift + CH+ /
 Setup	 Setup / OPT /
 Up/Presets+	 Up
 Up/Presets+	 Shift + >>1 / Presets+
 Display	 Display / Media
 Left/Tun-	 Left
 Left/Tun-	 Shift + << /
 Select/Enter	 OK
 Right/Tun+	 Right
 Right/Tun+	 Shift + >> /
 Menu	 Menu / Home
 Down/Presets-	 Down
 Down/Presets-	 Shift + I<< / Presets-





Original	Replacement
 Title	 Sound / Title
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Vol+	 Vol+
 Rec	 Rec / Rec Mode
 <</Scan-	 << / Tune-
 >>/Scan+	 >> / Tune+
 Prog/Memo	 TV/Radio /
 I<</Skip-	 I<< / Preset-
 >>/I/Skip+	 >>I / Preset+
 Vol-	 Vol-
 Repeat	 Green / APP / Repeat
 [...]S-Title	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Vocal Fader	 Shift + Mute / Dimmer
 RDS	 Shift + AV / Input / RDS

Original	Replacement
 PTY	 Info / Angle

