



Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep / Timer
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol +		Vol+
	Info		Info / Angle		ADD / DEL		Shift + Back / Return
	0		0		PR +		CH+ / Page+
	Recall		Back / Return		Vol -		Vol-
	PMode		Picture / Format		Cancel		Shift + Exit / Cancel / Clear
	I / II		Audio / Lang I/II		PR -		CH- / Page-
	EPG		Guide / EPG / -/--		Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green / APP / Repeat		Subpage / Rec / Rec / Rec Mode
	Yellow / YouTube / Repeat		Index / List / Smart / List
	Blue / Prime Video / Random		
	Play / Pause / Play / Slow		
	Play / Pause / Shift + Play /		
	Stop / Stop / Hold		
	Setup / Setup / OPT /		
	Eject / Eject / Surround		
	I<< / Text / Shift + I<< / Preset-		
	I<< / Text / Preset-		
	<< / << / Tune-		
	Size / Zoom / Size		
	S. Title M. / Sound / Title		
	>>I / Hold / >>I / Preset+		
	>>I / Hold / Shift + >>I / Preset+		
	>> / Reveal / >> / Tune+		
	Subpage / Rec / Shift + Rec / Rec Mode		

