


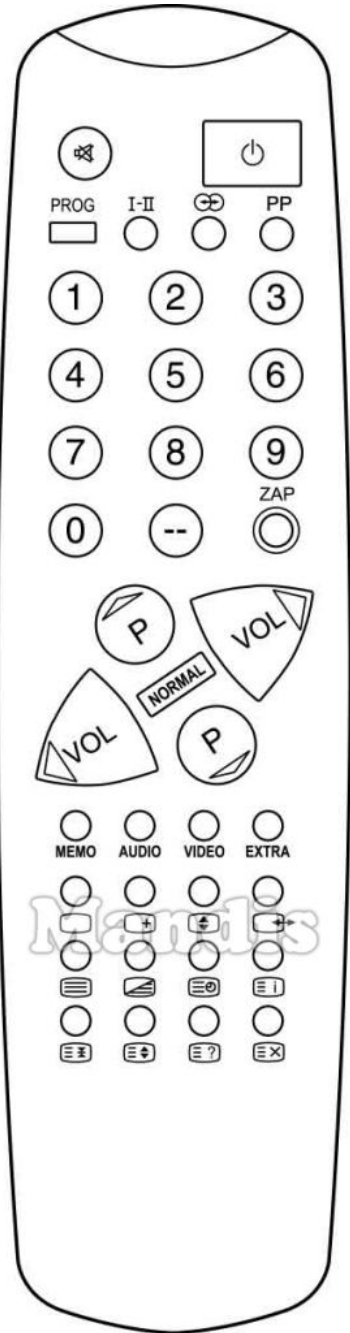

Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[ ]		Display / Media
	[ + ]		Stop / Hold





	Original	Replacement	
	[ ♦ ]	OPT-TOOLS SETUP	Setup / OPT /
	[ ]↔	TOP MENU D.MENU	D.Menu / Top
	[ ≡ ]	GOTO TEXT	Text / Goto
	[ /≡ ]	SHIFT + GOTO TEXT	Shift + Text /
	[ ≡○ ]	EQ SUBTITLE	Subtitle / EQ
	[ ≡ i ]	ANGLE INFO	Info / Angle
	[ ≡□ ]	STEP-FREEZE II	Pause / Step / Freeze
	[ ≡♦ ]	SIZE ZOOM	Zoom / Size
	[ ≡? ]	RDS AV INPUT	AV / Input / RDS
	[ ≡X ]	CLEAR EXIT	Exit / Cancel / Clear

Original	Replacement

