 








 






 

 
 
 

 

 

 









 

 

 


 





 









 







 



Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Tv/Radio	 TV/Radio /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold/Freeze	 Shift + Stop /
 D.Menu/Guide	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Smart / List
 Media	 Shift + Display / Media
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<< / Preset-	 I<< / Preset-
 I>> / Preset+	 I>> / Preset+
 Menu	 Menu / Home
 Up	 Up
 Lang/Audio	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 Vol+	 Vol+	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 CH+	 CH+ / Page+	 P.Mode	 Picture / Format
 Vol-	 Vol-	 S.Mode	 Sound / Title
 Display	 Display / Media		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Guide / EPG / -/--		
 0	 0		

