






























 



 



 





 



 



















Original	Replacement	Original	Replacement
 On	 Power	 Level Down	 Shift + CH- /
 Standby	 Shift + Power	 Level Up	 Shift + CH+ /
 Return	 Back / Return	 I<<	 I<< / Preset-
 Setup	 Setup / OPT /	 Play	 Play / Slow
 CH+/Disc+	 CH+ / Page+	 >>I	 >>I / Preset+
 Up	 Up	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold
 CH-/Disc-	 CH- / Page-	 >>	 >> / Tune+
 Left	 Left	 Rec / Random	 Blue / Prime Video / Random
 Enter	 OK	 Rec / Random	 Rec / Rec Mode
 Right	 Right	 Pause	 Pause / Step / Freeze
 Vol-	 Vol-	 Input Sel. DVD	 2
 Down	 Down	 Input Sel. CD	 3
 Audio Sel	 Audio / Lang I/II	 Input Sel. V1	 1
 CH Sel / Top Menu	 D.Menu / Top	 Input Sel. V2	 4
 Test / Menu	 Menu / Home	 Input Sel. TAP	 5
 Muting	 Mute / Dimmer	 Input Sel. TUN	 6





Original	Replacement	Original	Replacement
Input Sel. V3	7		
Input Sel. V4	8		
Input Sel. V5	9		
Input Sel. PH	0		
Pure A	+ Shift + 1		
Direct	+ Shift + 2		
Stereo	+ Shift + 3		
Surr.	Eject / Surround		
Surr.	+ Shift + 4		
All St.	+ Shift + 5		
DSP	+ Shift + 6		
SP A	+ Shift + 7		
SP B	+ Shift + 8		
CINE FLTR	+ Shift + 9		
Display	Display / Media		
Dimmer	+ Shift + Mute / Dimmer		
Zone 2	Smart / List		

Original	Replacement
















 


Original	Replacement
Sleep	Sleep / Timer
On	Power
Standby	Shift + Power
Return	Back / Return
Setup	Setup / OPT /
Disc+	CH+ / Page+
Vol+	Vol+
Disc-	CH- / Page-
Vol-	Vol-
Audio Sel /	Audio / Lang I/II
Audio Sel /	AV / Input / RDS
Top Menu	D.Menu / Top
Menu	Menu / Home
Muting	Mute / Dimmer
Angle	Info / Angle
Subtitle	Subtitle / EQ
I<<	I<< / Preset-

Original	Replacement
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Eject	Eject / Surround
Input Sel. DVD	Shift + 2
Input Sel. CD	Shift + 3
Input Sel. V1	Shift + 1
Input Sel. V2	Shift + 4
Input Sel. TAP	Shift + 5
Input Sel. TUN	Shift + 6
Input Sel. V3	Shift + 7
Input Sel. V4	Shift + 8
Input Sel. V5	Shift + 9




















 






















 



 







Original		Replacement		Original	Replacement
	Input Sel. PH		Shift + 0		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	+10 / --/---		Guide / EPG / -/--		
	0		0		
	Search/Enter		Fav / Marker / PC		
	Search/Enter		Red / Netflix / Search		





Original		Replacement		Original		Replacement	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

