



Original	Replacement
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Dimmer	Shift + Mute / Dimmer
Input Selector Multi CH	8
Return	Back / Return
Setup	Setup / OPT /
Enter	OK
Input Selector	2
Input Selector	5
Sleep	Sleep / Timer
Input Selector Tuner	6
SP A/B	Audio / Lang I/II
Muting	Mute / Dimmer
Up	Up
Down	Down

Original	Replacement
Right	Right
Input Selector CD	3
Left	Left
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
Play Rev.	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Display	Display / Media
Listening Mode Stereo	Sound / Title
Listening Mode Surround	Eject / Surround
Listening Mode <	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Text / Goto
Level-	CH- / Page-

 



 





 









 




























Original		Replacement		Original		Replacement	
	Vol+		Vol+		5 Tv		Shift + 5
	CH Sel		Smart / List		7 Tv		Shift + 7
	Level+		CH+ / Page+		8 Tv		Shift + 8
	L.Night		TV/Radio /		9 Tv		Shift + 9
	Cine FLTR		D.Menu / Top		0 Tv		Shift + 0
	Vol-		Vol-		+10 Tv		Shift + Guide / EPG / -/-
	Input Tv		Shift + AV / Input / RDS		Enter Tv		Shift + OK
	Vol+ Tv		Shift + Vol+		Right Tv		Shift + Right
	Vol- Tv		Shift + Vol-		Previous Menu Tv		Shift + Fav / Marker / PC
	CH/Disc/Album		Shift + CH+ /		Left Tv		Shift + Left
	CH/Disc/Album-		Shift + CH- /		Setup Tv		Shift + Setup / OPT / Tools
	1 Tv		Shift + 1		Up Tv		Shift + Up
	2 Tv		Shift + 2		Down Tv		Shift + Down
	Power Tv/Standby		Shift + Power				
	3 Tv		Shift + 3				
	4 Tv		Shift + 4				
	6 Tv		Shift + 6				





Original	Replacement	Original	Replacement
 Power	 Power	 Previous Menu/Muting	 Mute / Dimmer
 1	 1	 Left/Playlist/Cat-	 Left
 2	 2	 Enter	 OK
 3	 3	 Right/Playlist/Cat+	 Right
 4	 4	 Return	 Back / Return
 5	 5	 Down	 Down
 6	 6	 Setup	 Setup / OPT /
 7	 7	 Pause	 Pause / Step / Freeze
 8	 8	 Play	 Play / Slow
 9	 9	 Stop	 Stop / Hold
 VCR	 Shift + 4	 <<	 << / Tune-
 +10/10/-/-	 Guide / EPG / -/-	 >>	 >> / Tune+
 0/11	 0	 I<<	 I<< / Preset-
 CLR	 Exit / Cancel / Clear	 I>>I	 I>>I / Preset+
 Top Menu	 D.Menu / Top	 Stereo	 Sound / Title
 Up	 Up	 Surround	 Eject / Surround
 Previous Menu/Muting	 Menu / Home	 < Listening Mode	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
Listening Mode >	+ Shift + >>1 / Preset+		
Audio	AUDIO Audio / Lang I/II		
Subtitle	SUBTITLE Subtitle / EQ		
Random	RAN- DOM Blue / Prime Video / Random		
Repeat	REPEAT Green / APP / Repeat		
Display	MEDIA DISPLAY Display / Media		
Play Mode VCR	FORMAT PICTURE Picture / Format		
DVD	+ Shift + 2		
HDD	+ Shift + 7		





 













Original	Replacement
On / Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
12	Fav / Marker / PC
Disc+	CH+ / Page+
Vol+	Vol+
Disc-	CH- / Page-
Vol-	Vol-

Original	Replacement
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+
I<< / Preset-	I<< / Preset-
>>I / Preset+	>>I / Preset+
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Random	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
Display	Display / Media





Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10/10/-/-		Guide / EPG / -/-
	0/11		0
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold

Original		Replacement	
	<<		<< / Tune-
	Stereo		Audio / Lang I/II
	Surround		Eject / Surround
	< Listening Mode		Shift + I<< / Preset-
	Listening Mode >		Shift + >>I / Preset+
	Play Mode		D.Menu / Top
	L.Night		Sleep / Timer

