


 








 

 
 
 
 

 


 
 
 

 
 
 

 

 
 


 

 

 

 



 
 


 
 
 

 
 







 








Original	Replacement	Original	Replacement
 Power	 Power	 i	 DISPLAY INFO Info
 AV	 TIMER AV AV	 + P P+	 + CH Ch +
 1 ./@	 1	 - P P-	 - CH Ch -
 2 abc	 2	 MENU	 TOP MENU MENU Menu
 3 def	 3	 EXIT	 CLEAR EXIT Exit
 4 ghi	 4	 OPTION	 SETTINGS OPT Options
 5 jkl	 5	 BACK/RETURN	 RETURN BACK Back
 6 mno	 6		
 7 pqrs	 7		
 8 tuv	 8		
 9 wxyz	 9		
 0 _	 0	 OK	 OK Ok
 STILL	 PICTURE FORMAT Format	 TV	 SEARCH TV/R TV/R
	 FAV PRE-CH Pre Ch	 MEDIA	 APP MEDIA Media
 + Vol+	 + VOL Vol +	 GUIDE	 - / - GUIDE Guide
 - Vol-	 VOL Vol -		 ECO 3D 3D
 Mute	 MUTE Mute	 TIMER	 SHIFT + TIMER AV Shift + AV





Original	Replacement	Original	Replacement
Text	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Audio	Dual		
STTL	Subt		
Sound	+ Shift + Dual		
<<	<<		
Pause	Pause		
>>	>>		
Rec	Rec		
Play	Play		
Stop	Stop		

