













Original	Replacement
	Power
	Display / Media
	Shift + 1
	TV/Radio /
	AV / Input / RDS
	Picture / Format
	Menu / Home
	Audio / Lang I/II
	Shift + Rec Mode
	Info / Angle
	Exit / Cancel / Clear
	D.Menu / Top
	Smart / List
	Up
	Guide / EPG / -/--
	Left
	OK

Original	Replacement
	Right
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto
	Subtitle / EQ
	Zoom / Size
	Shift + Stop /
	1
	2
	3
	4
	5























 



Original	Replacement
6	6
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
(<>)	Sound / Title
Vol+	Vol+
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
Power Down	Shift + Power
Rec	Rec / Rec Mode
Programme	Shift + CH- /
Programme Up	Shift + CH+ /
<<	<< / Tune-
I<<	I<< / Preset-

Original	Replacement
Play	Play / Slow
>>	>> / Tune+
>>I	>>I / Preset+
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Rec	 Rec / Rec Mode		
 Programme	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 <<	 << / Tune-		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		
 Stop	 Stop / Hold		
 Pause/Step	 Pause / Step / Freeze		

