



 
 
 

 
 
 

 

 

 

 

 

 

 













Original	Replacement
 Power On	 Power
 Standby	 Shift + Power
 Focus	 CH+ / Page+
 Zoom	 Zoom / Size
 Shift	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Shutter	 Smart / List
 Vol-	 Vol-
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 On-Screen	 Display / Media
 Down	 Down
 Auto Setup	 Setup / OPT /
 RGB 1/2	 Red / Netflix / Search

Original	Replacement
 Digital Link	 Green / APP / Repeat
 DVI-D	 Yellow / YouTube / Repeat
 Video	 Shift + Red / Netflix /
 Video	 Shift + 4
 Display Port	 Blue / Prime Video / Random
 HDMI	 Shift + Green / APP /
 HDMI	 Shift + 0
 HDMI	 AV / Input / RDS
 1/Function	 1
 2/Keystone	 2
 3/Default	 3
 4/Freeze	 Pause / Step / Freeze
 4/Freeze	 4
 5/D.Zoom	 5
 5/D.Zoom	 Shift + Zoom /
 6/Mute	 6
 6/Mute	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	7/P-Timer	7		
	7/P-Timer	Sleep / Timer		
	8/P IN P	8		
	9/Aspect	9		
	9/Aspect	Picture / Format		
	ID ALL	Guide / EPG / -/--		
	0/Status	0		
	0/Status	Info / Angle		
	ID SET	Fav / Marker / PC		
	ECO	D.Menu / Top		

