 

 

 

 



 

 

 

 

 

 

 

 



 

 









 



 

 

 



 

 



 

 



 


 




Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		8		8
	Power		Power		9		9
	Phono		Shift + 9		0		0
	Tuner		Shift + 6		Menu / Guide		Menu / Home
	CD		Shift + 3		Up		Up
	CDR / Tape		Shift + 5		OK		OK
	TV		Shift + 1		Left		Left
	VCR		Shift + 4		Right		Right
	SAT		Shift + 0		Vol +		Vol+
	DVD		Shift + 2		Down		Down
	1		1		Vol -		Vol-
	2		2		i / News TA		Info / Angle
	3		3		I< / Channel/Track -		I<< / Preset-
	4		4		>I / Channel/Track +		>>I / Preset+
	5		5		Loudness		Audio / Lang I/II
	6		6		SubW On/Off		Subtitle / EQ
	7		7		FR. D.		Zoom / Size





Original	Replacement
Night	Sleep / Timer
Virtual Mode	Sound / Title
Surround On/Off	Eject / Surround
Sub Woofer +	CH+ / Page+
Rear Channel +	>> / Tune+
Surround Mode	Picture / Format
Sub Woofer -	CH- / Page-
Rear Channel -	<< / Tune-
Test Tone	Text / Goto

Original	Replacement

