


 





 






Original	Replacement	Original	Replacement
Power	Power	Exit	Exit
Mute	Mute	Up/PR+	Up
1	1	Down/PR-	Down
2	2	Right	Right
3	3	Left	Left
4	4	OK/List	Ok
5	5	Vol+	Vol +
6	6	Vol-	Vol -
7	7	[+]	3D
8	8	UHF	Smart
9	9	↑	Ch +
0	0	↓	Ch -
Tv/Radio	TV/R	FAV	Pre Ch
←PR	Back	PAL/NTSC	Format
EPG	Guide	Red	Red
Menu	Menu	Green	Green
Info	Info	Yellow	Yellow





Original	Replacement
 Blue/Sound	 Blue
 Audio	 Dual
 TXT	 Text
 [...]	 Subt
 Pause	 Pause
 Tv/AV	 AV

Original	Replacement

