 











 
 
 
 

 


 



 









 

 



 



 









 







 


 






| Original   | Replacement  |
|--|--|
|  Power    |  Power                      |
|  Sleep    |  Sleep / Timer              |
|  Screen   |  Picture / Format           |
|  Presets  |  Setup / OPT /              |
|  ↔        |  TV/Radio /                 |
|  FAV      |  Shift + Fav / Marker / PC |
|  Lang     |  Audio / Lang I/II         |
|  Subtitle |  Subtitle / EQ             |
|  TXT      |  Text / Goto               |
|  1        |  1                          |
|  2       |  2                         |
|  3      |  3                        |
|  4      |  4                        |
|  5      |  5                        |
|  6      |  6                        |
|  7      |  7                        |
|  8      |  8                        |

| Original  | Replacement   |
|---|---|
|  9       |  9                         |
|  EPG     |  Guide / EPG / -/-         |
|  0       |  0                         |
|  SWAP    |  Fav / Marker / PC         |
|          |  D.Menu / Top              |
|          |  Smart / List              |
|  SOURCE  |  AV / Input / RDS          |
|  MENU    |  Menu / Home               |
|          |  Up                        |
|          |  Left                      |
|  OK     |  OK                       |
|        |  Right                   |
|        |  Down                    |
|  C     |  Exit / Cancel / Clear   |
|  DISP. |  Display / Media         |
|        |  Shift + Red / Netflix / |
|        |  Back / Return           |





| Original | Replacement            | Original | Replacement                 |
|----------|------------------------|----------|-----------------------------|
|          | CH+                    |          | Yellow/Root                 |
|          | Info                   |          | Blue/Title                  |
|          | Vol+                   |          |                             |
|          | CH-                    |          |                             |
|          | Mute                   |          |                             |
|          | Vol-                   |          |                             |
|          | Rec                    |          |                             |
|          | Pause                  |          |                             |
|          | I<<                    |          |                             |
|          | >>I                    |          |                             |
|          | <<                     |          |                             |
|          | Play                   |          |                             |
|          | Stop                   |          |                             |
|          | >>                     |          |                             |
|          | Red/↑/Zoom             |          |                             |
|          | Red/↑/Zoom             |          |                             |
|          | Green/↓/Repeat         |          |                             |
|          | CH+ / Page+            |          | Yellow / YouTube / Repeat   |
|          | Info / Angle           |          | Blue / Prime Video / Random |
|          | Vol+                   |          |                             |
|          | CH- / Page-            |          |                             |
|          | Mute / Dimmer          |          |                             |
|          | Vol-                   |          |                             |
|          | Rec / Rec Mode         |          |                             |
|          | Pause / Step / Freeze  |          |                             |
|          | I<< / Preset-          |          |                             |
|          | >>I / Preset+          |          |                             |
|          | << / Tune-             |          |                             |
|          | Play / Slow            |          |                             |
|          | Stop / Hold            |          |                             |
|          | >> / Tune+             |          |                             |
|          | Red / Netflix / Search |          |                             |
|          | Zoom / Size            |          |                             |
|          | Green / APP / Repeat   |          |                             |

