
 

 





















Original	Replacement	Original	Replacement
	Power		Power
	[i+]		Info
	Sleep		Sleep
	AV Mode		Media
	Eco		3D
	O)/II/I+II		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	PR+		Ch +
	PR-		Ch -
	[<>]		Format
	PC		Smart
	[><]		List
	Menu		Menu
	End		Exit
	Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Original	Replacement	Original	Replacement
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	EPG		Guide
	Text		Text
	[≡?]		Eject
	[...]		Subt
	[≡+]		Options
	[≡o]		D. Menu
	[≡♦]		TV/R

