 


 


 

 
 









 








 









 

 

 

 

 







Original	Replacement	Original	Replacement
Power TV	Power	← Time Shift	<<
Option Source	Options	Pause Time Shift	Pause
[i+]	Shift + Info	→ Time Shift	>>
ATV	Shift + Smart	1	1
P.Info	Info	2	2
DTV	Smart	3	3
SAT	Media	4	4
Radio	TV/R	5	5
Power Source	Shift + Power	6	6
<< Source	<<	7	7
Play Source	Play	8	8
>> Source	>>	9	9
Rec Source	Rec	0	0
Rec Stop	Shift + Stop	Recall	Pre Ch
Stop Source	Stop	Source	AV
Control	Shift + Ok	I/II/I+I/▼/O	Dual
Ready Time Shift	List	[<>]	Format





Original		Replacement		Original		Replacement	
	AV Mode	 Shift + AV			[...]		Subt
	Eco		3D		[≡?]		Eject
	Mute		Mute		[≡●]		Sleep
	Vol+		Vol +		[≡□] Hold		Shift + Pause
	Vol-		Vol -		Red		Red
	P+		Ch +		Green		Green
	P-		Ch -		Yellow		Yellow
	[≡]		Text		Blue		Blue
	Menu		Menu				
	EPG		Guide				
	Up		Up				
	Right		Right				
	Down		Down				
	Left		Left				
	OK		Ok				
	End		Exit				
	Back		Back				

