
 
 







 
 
 
 
 

 


 


 
 
 

 
 
 


 










 

Original	Replacement
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right












 




 

 



 



 
 


 

 

 

 

 

 
 
 

 
 
 
 
 
 

 





 

 
 







 

Original	Replacement
 Down	 Down
 Return	 Back
 System Menu	 Menu
 [+] Display	 Info
 I << / Preset-	 I <<
 Replay	 Shift + Left
 Advance	 Shift + Right
 >> I / Preset+	 >> I
 << / < I / Tuning-	 <<
 Play	 Play
 >> / I > / Tuning+	 >>
 Pause	 Pause
 Stop	 Stop
 TV	 TV/R
 Muting	 Mute
 Volume+	 Vol +
 Volume-	 Vol -

Original	Replacement
 Sound Mode+	 Ch +
 Sound Mode-	 Ch -





Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 [i+]	 Info	 Tools / Options	 Options
 Analog	 Media	 Home / Menu	 Menu
 Digital	 Smart	 Muting	 Mute
 1	 1	 Volume+	 Vol +
 2	 2	 Volume-	 Vol -
 3	 3	 Prog+	 Ch +
 4	 4	 Prog-	 Ch -
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Text	 Text		
 -/--	 Shift + Guide		
 Guide	 Guide		

Original	Replacement	Original	Replacement
 Source	 AV	 Tools / Options	 Options
 Home / Menu	 Menu	 Muting	 Mute
 Volume+	 Vol +	 Volume-	 Vol -
 Prog+	 Ch +	 Prog-	 Ch -

