







 
 










 




 
 









 










 

 







 



 



 

 

 

 





 

Original	Replacement	Original	Replacement
 Power	 Power	 CH-	 CH- / Page-
 TV / AV	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 TV/TXT	 Text / Goto	 Vol-	 Vol-
 Cancel	 Shift + Exit / Cancel / Clear	 Up	 Up
 Reveal	 Display / Media	 Left	 Left
 DTV	 D.Menu / Top	 OK	 OK
 Hold	 Stop / Hold	 Right	 Right
 Size	 Shift + Zoom /	 Down	 Down
 Subpage	 Eject / Surround	 1	 1
 Index	 Smart / List	 2	 2
 Red	 Red / Netflix / Search	 3	 3
 Green	 Green / APP / Repeat	 4	 4
 Yellow	 Yellow / YouTube / Repeat	 5	 5
 Blue	 Blue / Prime Video / Random	 6	 6
 CH+	 CH+ / Page+	 7	 7
 Menu	 Menu / Home	 8	 8
 Vol+	 Vol+	 9	 9

Original	Replacement	Original	Replacement
 CH-	 CH- / Page-	 CH- / Page-	 CH- / Page-
 Exit	 Exit / Cancel / Clear	 Vol-	 Vol-
 Vol-	 Vol-	 Up	 Up
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 OK	 OK	 Right	 Right
 Right	 Right	 Down	 Down
 Down	 Down	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	4	4
4	4	5	5
5	5	6	6
6	6	7	7
7	7	8	8
8	8	9	9
9	9	TV	TV
TV	TV	DVD	DVD
DVD	DVD	CD - STB	CD - STB
CD - STB	CD - STB	VIDEO	VIDEO
VIDEO	VIDEO	TAPE	TAPE
TAPE	TAPE	AUX - HDD	AUX - HDD
AUX - HDD	AUX - HDD	USB	USB
USB	USB	HDMI - BAT	HDMI - BAT
HDMI - BAT	HDMI - BAT	TUNER	TUNER
TUNER	TUNER	AUX - HDD	AUX - HDD
AUX - HDD	AUX - HDD	NETFLIX	NETFLIX
NETFLIX	NETFLIX	APP	APP
APP	APP	YouTube	YouTube
YouTube	YouTube	Prime Video	Prime Video
Prime Video	Prime Video	SEARCH	SEARCH
SEARCH	SEARCH	REPEAT	REPEAT
REPEAT	REPEAT	REPEAT A-B	REPEAT A-B
REPEAT A-B	REPEAT A-B	RANDOM	RANDOM
RANDOM	RANDOM	Mandis SHOP	Mandis SHOP
Mandis SHOP	Mandis SHOP	www.mandis.tv	www.mandis.tv





Original	Replacement
	 TV/Radio /
	 0
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Audio / Lang I/II
	 Mute / Dimmer
	 Sleep / Timer
	 Info / Angle
	 Zoom / Size
	 Pause / Step / Freeze
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Shift + Sleep / Timer

Original	Replacement
	 Setup / OPT /

