





 

 

 

 





 






































 



 

 
 






Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	(T)		Display / Media
	0		0
	List		Smart / List
	Vol+		Vol+
	[i]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	*		Setup / OPT /
	P-		CH- / Page-
	Home		Menu / Home
	Up		Up
	≡		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Text		Text / Goto
	O)/Lang		Audio / Lang I/II
	Subt.		Subtitle / EQ





Original	Replacement	Original	Replacement
	Red 		
	Green / APP / Repeat 		
	Yellow / YouTube / Repeat 		
	Blue / Prime Video / Random 		
	<< / Tune- 		
	Pause / Step / Freeze 		
	>> / Tune+ 		
	Zoom / Size 		
	Play / Slow 		
	Stop / Hold 		
	Shift + Red / Netflix / +		

